

Pushbuttons

Pushbutton	Description
⊙	<ul style="list-style-type: none"> To turn on the detector, press ⊙. To turn off the detector, press ⊙ and hold for 5 seconds. To activate or deactivate the confidence beep, press and hold ○ then press ⊙ at startup.
▼	<ul style="list-style-type: none"> To decrement the displayed value, press ▼. To enter the user options menu, press ▼ and ▲ simultaneously and hold for 5 seconds. To initiate calibration and setting alarm setpoints, press ▼ and ○ simultaneously.
▲	<ul style="list-style-type: none"> To increment the displayed value, press ▲. To view the TWA, STEL, and maximum gas exposures, press ▲ and ○ simultaneously.
○	<ul style="list-style-type: none"> To save the displayed value, press ○. To clear TWA, STEL, and maximum gas exposures, press and hold ○ for 6 seconds. To acknowledge a latched alarm, press ○.

Activating the Detector

To activate the detector, press ⊙. Once the detector passes the self-test, the detector begins normal operation.

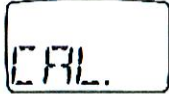
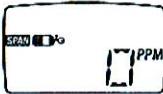
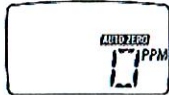

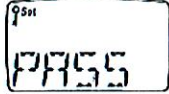


Deactivating the Detector

To turn off the detector, press ⊙ and hold for 5 seconds.

4

GasAlert Extreme
Calibration

Calibration

Procedure	Display	Procedure	Display
1. In a clean atmosphere, press ▼ and ○ simultaneously and hold for 5 seconds. The detector beeps four times. The detector then beeps once more signifying that calibration has started.		5. When the display flashes the gas cylinder, connect the calibration bottle and apply gas at a flow rate of 500 to 1000 ml/min. (refer to the next page). The detector beeps three times at the end of the span stage. Remove the calibration gas.	
2. The display flashes AUTO-ZERO while the detector automatically zeroes the sensor. The detector beeps twice at the end of the auto-zero stage.		6. Press ▼ or ▲ to change the next calibration due date. Press ○ to save.	
3. If the detector is pass code protected, PASS flashes on the display. The correct pass code must be entered before proceeding to set span.		7. Press ○ to save the current alarm setpoint. Press ▼ or ▲ to change the alarm setpoint and press ○ to save the new value. The detector beeps and vibrates four times at the end of calibration.	
4. The display flashes the current calibration gas setting. You can press ○ to accept the current setting, or you can press ▼ or ▲ to change the setting and press ○ to confirm your new selection.		<p>⚠ Warning For correct flow and span rates, refer to your user manual.</p>	

5